

Keyboard

Enable Keyboard Emulation



Load Keyboard Wedge Defaults – Loads the default settings for keyboard wedge mode.



Enable Stand-Alone Keyboard Emulation – Use this with special stand-alone models that are not cabled for an external keyboard. Scan this bar code to enable the Stand-Alone Mode. The scanner will send keyboard “power on” information and configure hardware to simulate a constant keyboard connection.



Enable Keyboard Wedge Emulation – Use this with an external keyboard. Transmit in wedge mode to allow standard PC keyboards to communicate when no bar code data is available.

Country/Scan Code Table Selects



* USA Keyboard



Switzerland Keyboard



Spain Keyboard



Italy Keyboard



Germany Keyboard



France Keyboard



UK Keyboard